



ASSEMBLY INSTRUCTIONS

# METAL POINT 2 SHELVING FOR TIRES

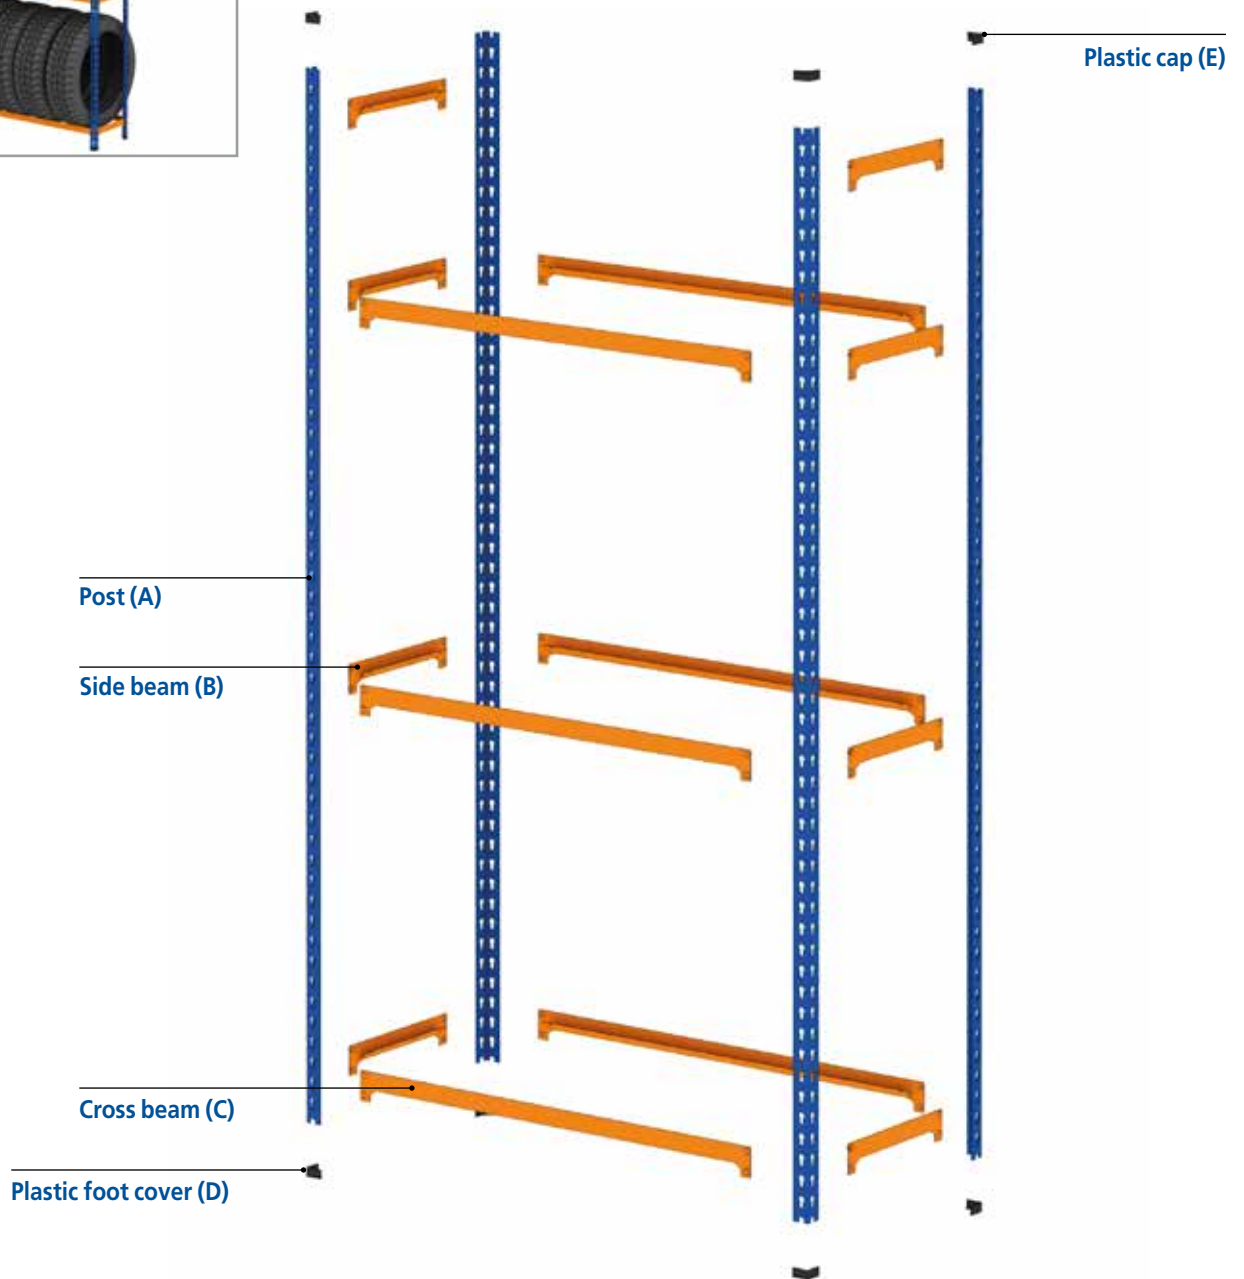

1



First, place the plastic foot cover (D) at the bottom of the posts (A) and, then, the plastic caps (E) at the top.

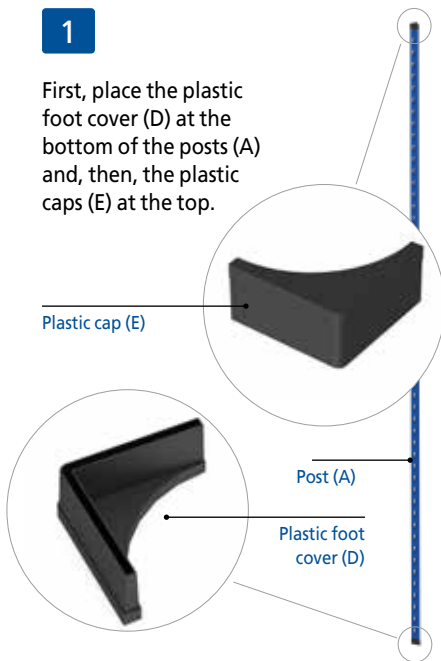

2

Next, assemble the side beams (B) starting with the lower level. Use a nylon mallet to tap the side beams (B) into place on the posts (A).

Before doing so, make sure the side beam (B) is set at a 90° angle to the post (A).

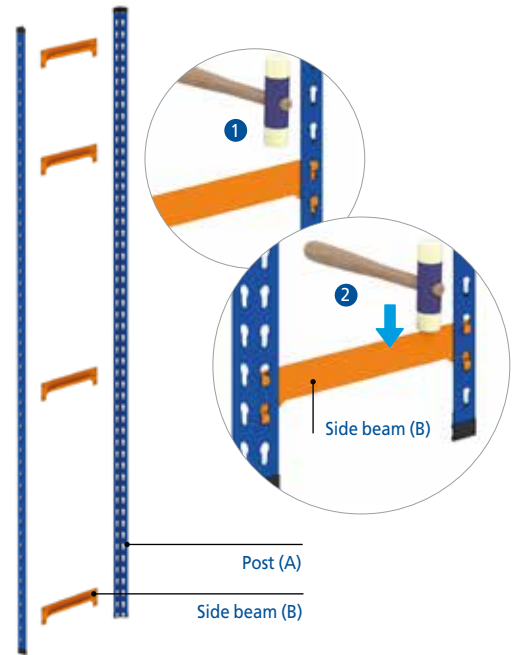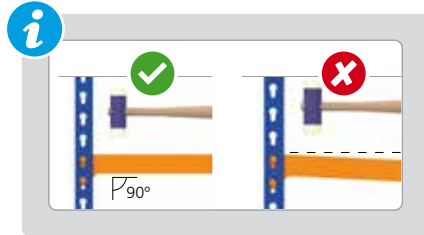

3

Next, attach the cross beams (C) of the lower level in the same manner as the side beams (B), and check that they are positioned at the same level.

